
Polly Tuff Step Through Picnic Table


For Fastener Pack (FP-PTST8-CU-03)

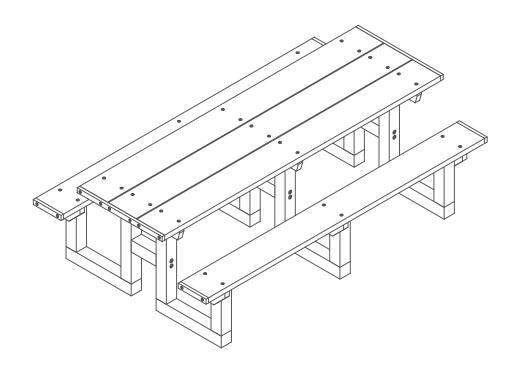

Congratulations!!

You have just purchased the finest recycled plastic picnic table available. Enjoy!!!

Before assembly, please check to make sure all components are included.

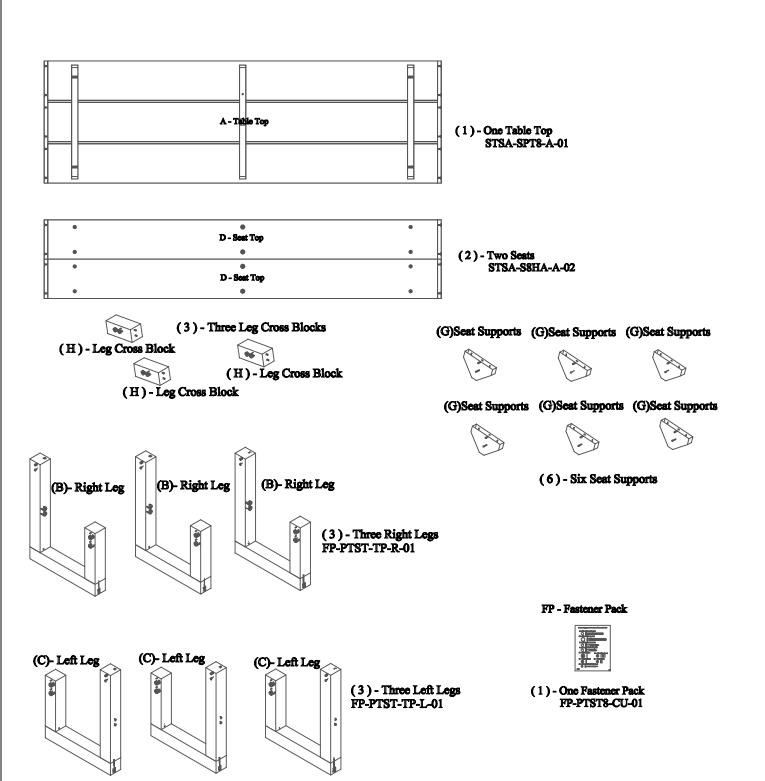


Before assembly, please check to make sure all fasteners are included.

12 - 3/8" x 5" Hex Head Bolt



12 - 3/8" x 4" Hex Head Lag Bolt



36 - 3/8" Flat-Washer



12 - 3/8" Nylon Lock Nut




24 - #12 x 3" Flat Head Phillips Screw



Also needed for this assembly will be the following materials:

1 - #3 Phillips Drive Bit


2 - 9/16" Socket Wrench

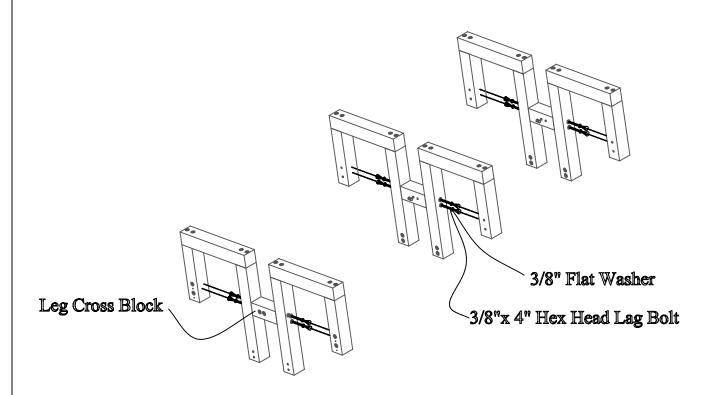

Step #1:

While legs are placed in the proper configeration place a leg Cross Block between the two legs and align the holes, Insert (1)- one 3/8" x 4" Hex Head with (1)- one 3/8" Flat Washer per hole.


Note: Do not tighten bolts completely. This will be done in a later step.

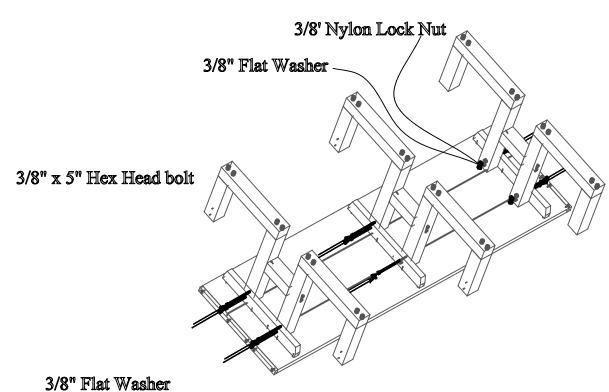

Step #2:

While the table top is upside-down, fasten the legs to the under top supports being sure that the counter bores are pointing toward the center of the table as shown above. Use (1) One 3/8" x 5" Hex Head Bolt along with (1) One 3/8" Flat Washer and (1) 3/8" Nylon Lock Nut and (1) 3/8" Flat Washer per hole to secure.

Note: Do not tighten bolts completely. This will be done in a later step.

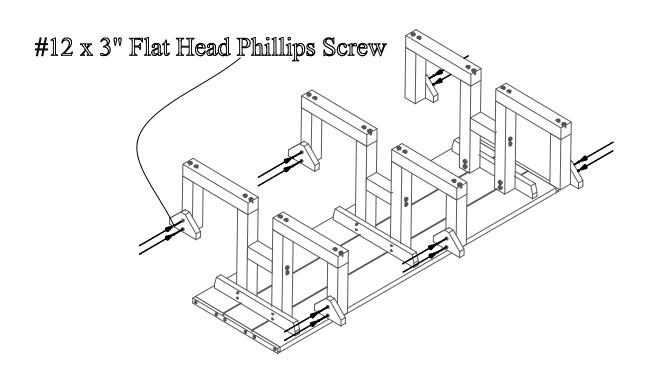


Step #3: While table isin the upside down position align the holes on the seat supports with the pre drilled holes in the leg and screw a #12x 3" phillips head screw tight.

Note: Do not tighten bolts completely. This will be done in a later step.

Note: Be sure to tighten all loose bolts after this step is complete.

Step #4:

Flip the table upright onto the legs. Please take caution while flipping the table. At this point in assembly the table weighs approximately 260 Pounds.

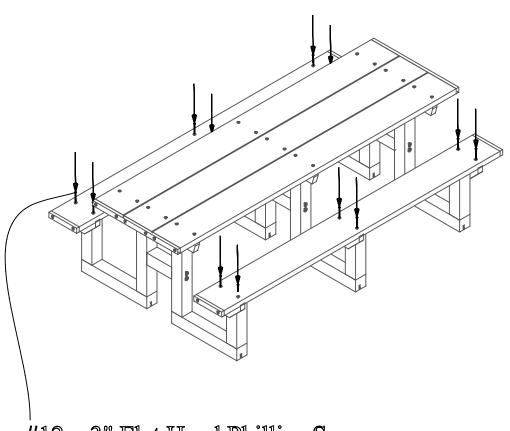

#12 x 3" Flat Head Phillips Screw

Step #5:

While the table is upright fasten the seats to the seat cross supports being sure to center all holes over boards.

Use (1) One #12 x 3" Flat Head Phillips Screw per hole to secure.